


# Quick start BeNomic S500-S660



## Buttons and switches

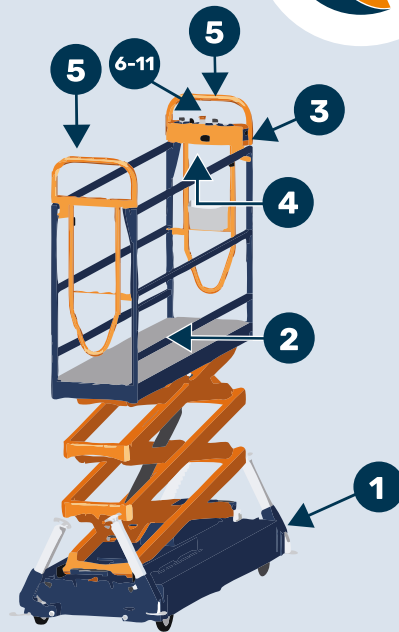


## Control panel




- 6 Direction button
- 7 Speed button
- 8 Emergency button
- 9 Platform button
- 10 On/claxon / reset
- 11 Status light

Start here

## Switch on

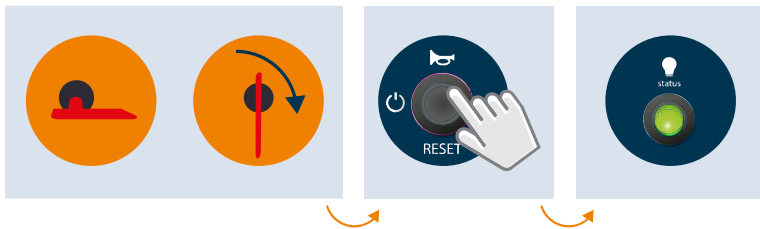


## Move

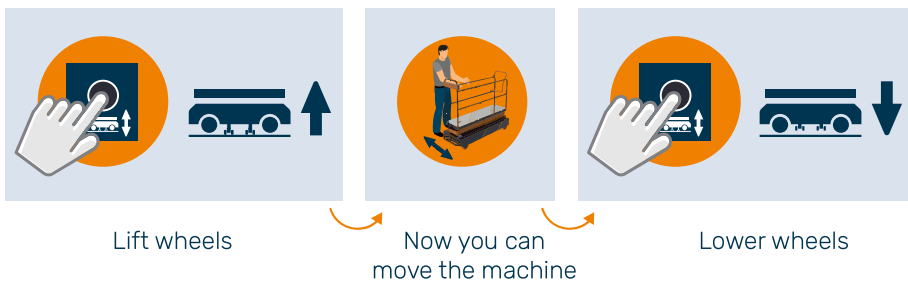





### Drive

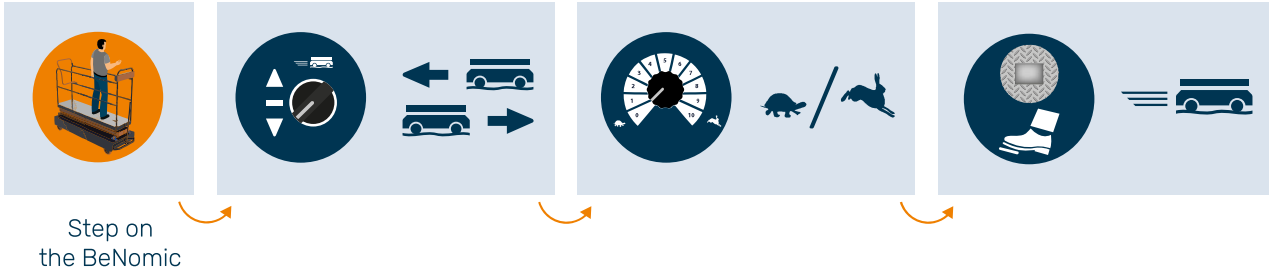

### Cruise control

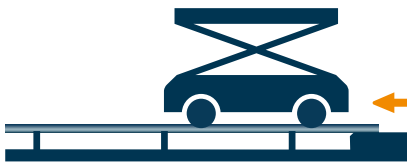


First drive onto the pipe rail

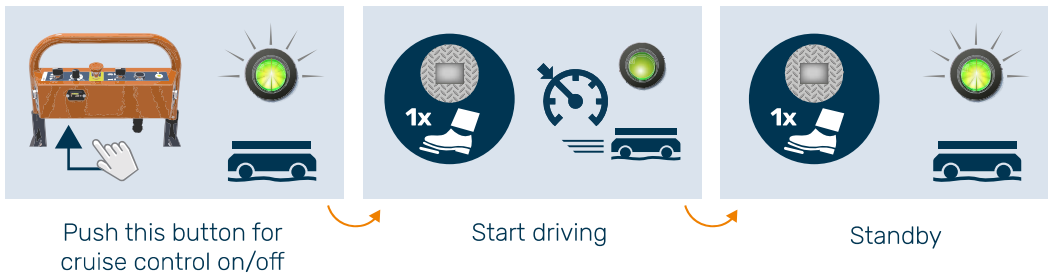


### Platform up and down


### Stabilizers out

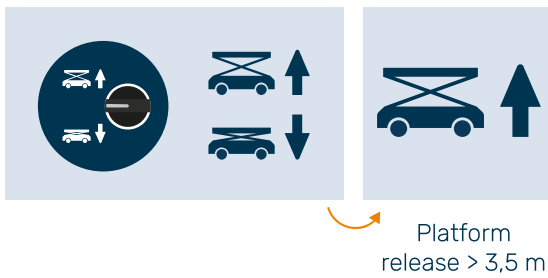


### Operating the stabilisers

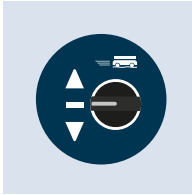


Switch into the neutral position

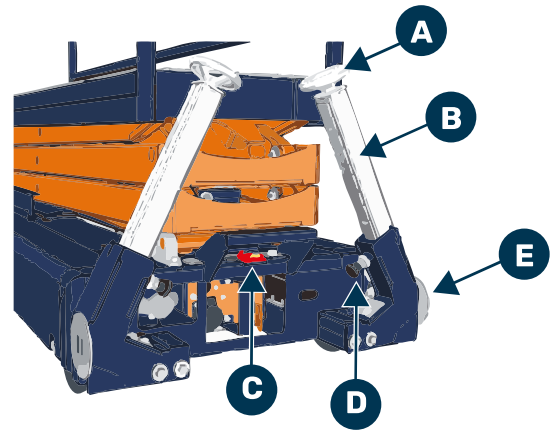

- A** Hand wheel
- B** Stabiliser upright with locking holes
- C** Cross-level
- D** Locking bin
- E** Stabiliser foot

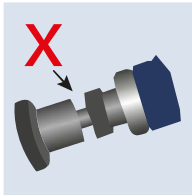


Stabiliser foot oncorrectly

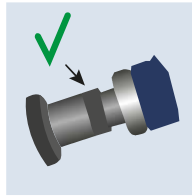


Stabiliser foot correctly


### Stabilizers out

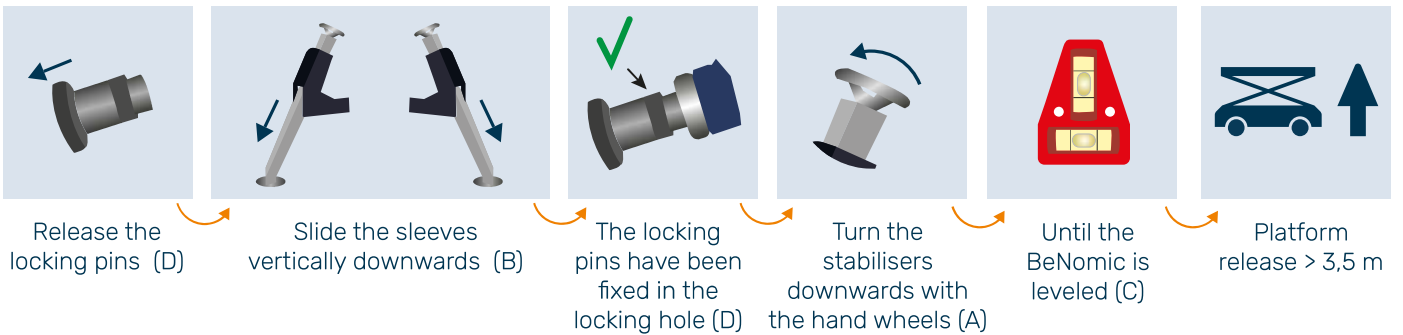


### Making the BeNomic drivable

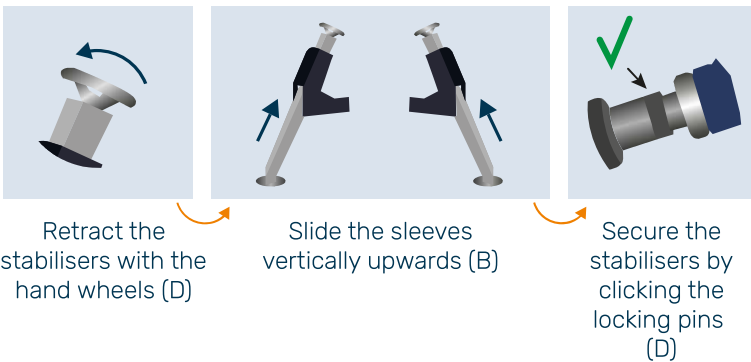


### Emergency stop

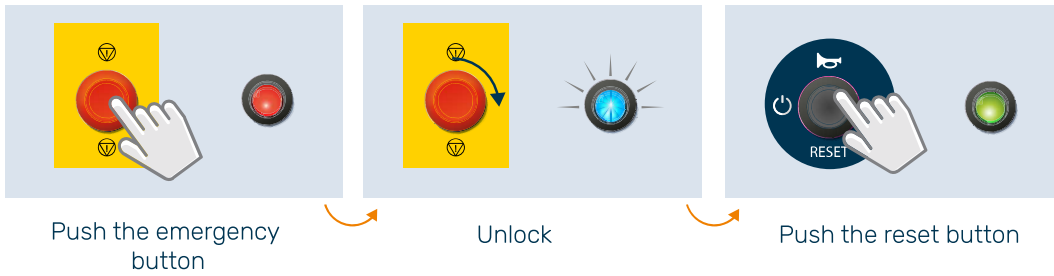


### Tilt indication

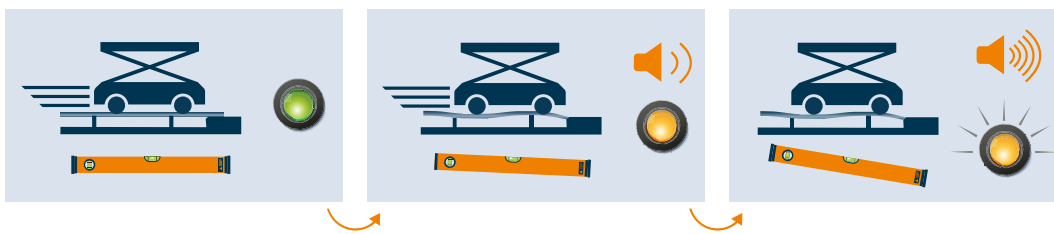

### Overload indication

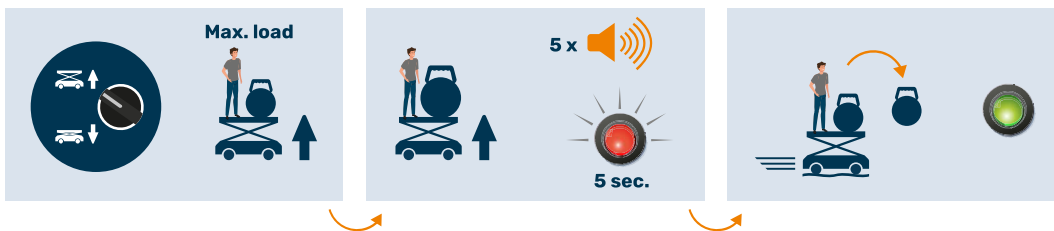

### Battery empty

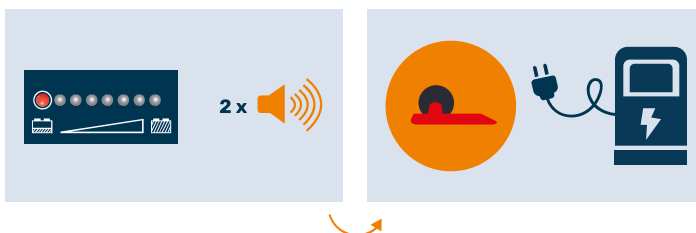

### Daily maintenance (end of the day)



Battery check



Battery empty





Cleaning



### Wrong operation



### Alarm

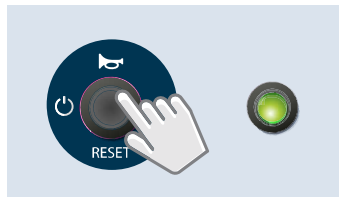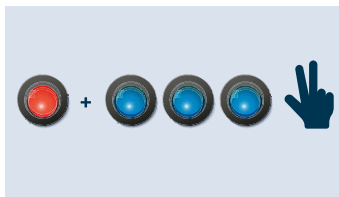

Push the reset button

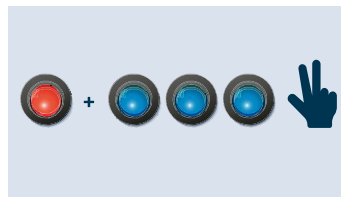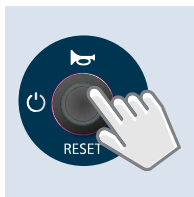

Consult dealer or manual